ZANDA
COMMERCIAL HARDWARE

Data Sheet

Product Code: 9345.D

"MORE THAN JUST QUALITY — **AN EXPERIENCE**"

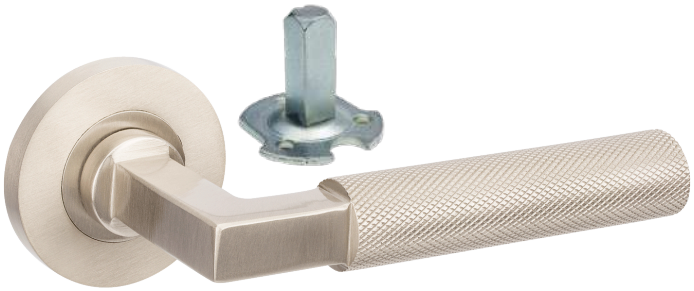

VISCA

ZURICH KNURLED

DUMMY SET (HANDED)

Component: 1x Lever & 1x 8mm Spindle

Description:

- Designed by esteemed European creators
- Crafted in Italy with expert precision
- Made from solid brass or stainless steel
- Available in a variety of premium finishes
- Lifetime warranty for long-term assurance
- Corrosion-resistant sacribond & micronized finishes
- Heavy-duty construction for durability
- Engineered for smooth and reliable performance
- Blends craftsmanship with cutting-edge innovation
- Knurled design for bold grip and style.

Available Set:

- Lever Set
- Passage Set
- Privacy Set
- Dummy Set
- Entrance Set

Available Finish:

- Brushed Nickel
- Graphite Nickel
- Satin Brass

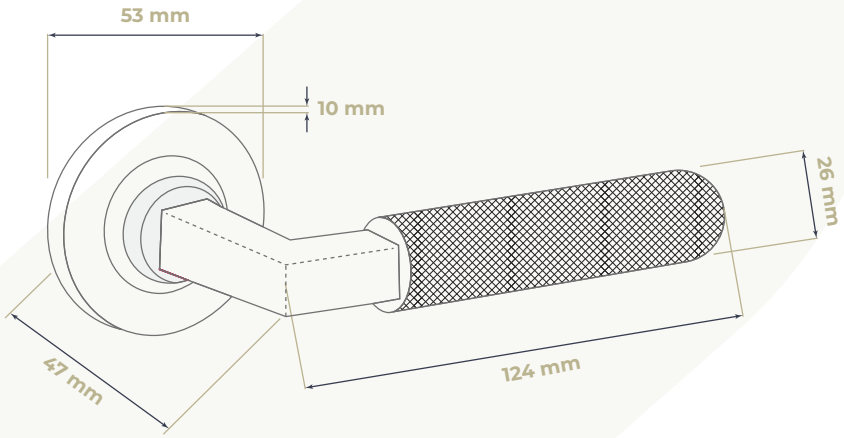

Note: Measurements are in mm

1 300 926 321
sales@zanda.com.au
www.zanda.com.au

ZANDA
COMMERCIAL HARDWARE

Data Sheet

Product Code: 9345.D

"MORE THAN JUST QUALITY — **AN EXPERIENCE**"

VISCA

ZURICH KNURLED

DUMMY SET (HANDED)

Component: 1x Lever & 1x 8mm Spindle

The 8mm dummy fix mounts are designed to be recessed and screwed onto the door face, with the handle slipping over the top. The handle base plate is then screwed to, or bolted through the door

It is important to ensure solid fixing is available for handle and dummy mount screws (especially for hollow core doors).

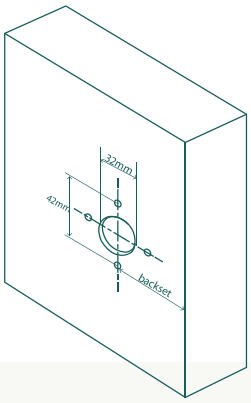

1. Establish the height and position for the handle on the door.

2. Drill a 32mm diameter recess on the face of the door to a depth of 4mm. Match the backset measurement of the passage doors throughout your home. Mark and drill four pilot holes vertically and horizontally, at 21mm from the centre of the recess.

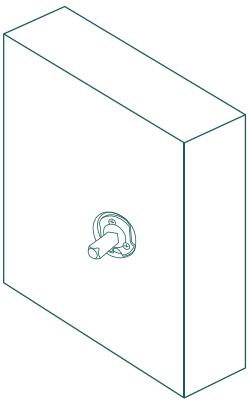

3. Fit the dummy spindle by drilling and fitting the three wood screws provided. Ensure the grooved side of the spindle is aligned with the grubscrew on the handle.

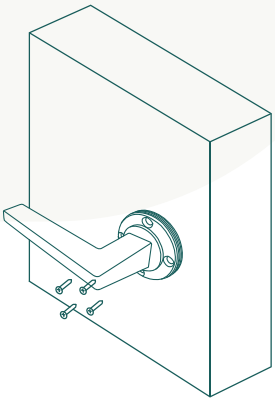

4. Slide the handle onto the spindle ensuring that it sits straight on the door face.

5. Install the handle by screwing the base plate to the door with the wood screws provided.

Note: In some cases where through door bolts are provided, the door can be drilled both sides to accept the through screws.

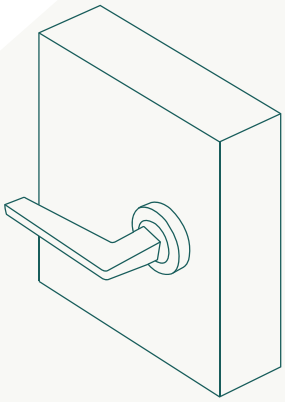

6. Screw the rose cover onto the handle and tighten the grubscrew on the side of the lever onto the spindle.

Note: The grubscrews may need a re-tighten after a bedding-in period. We recommend medium strength thread-lock to be used, Windsor Code: 1276

Note: Measurements are in mm

1 300 926 321
sales@zanda.com.au
www.zanda.com.au